HomeLink Universal Transmitter

On EX-V6 model only

The HomeLink Universal Transmitter built into your car can be programmed to operate remotely-controlled devices around your home, such as garage doors, lighting, or home security systems. It can replace up to three remote transmitters.

Customer Assistance

If you have problems with training the HomeLink Universal Transmitter, or would like information on home products that can be operated by the transmitter, call (800) 355-3515.

Important Safety Precautions

Always refer to the operating instructions and safety information that came with your garage door opener or other equipment you intend to operate with the HomeLink Universal Transmitter. If you do not have this information, you should contact the manufacturer of the equipment.

While training or using the transmitter, make sure you have a clear view of the garage door or gate, and that no one will be injured by its movement.

If your garage door opener was manufactured before April 1982, you may not be able to program the HomeLink Universal Transmitter to operate it. Garage door openers manufactured before that date do not have a safety feature that causes them to stop and reverse if an obstacle is detected during closing, increasing the risk of injury. If you have questions, call (800) 355-3515.

Training the Transmitter

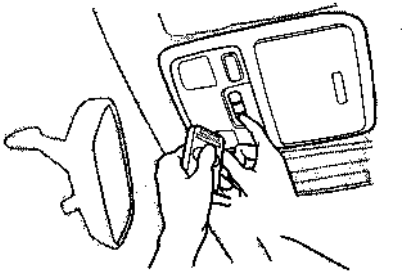

Before you can use the HomeLink Universal Transmitter to operate devices around your home, it must "learn" the proper codes. For example, to train the transmitter to open and close the garage door:

1. *This step erases all previously learned codes. Perform this step before training the transmitter for the very first time.* Press and hold the two outside buttons until the red light in the transmitter flashes (approximately 20 seconds). Release the buttons.

2. Hold the end of the garage door opener remote control near the HomeLink transmitter. Make sure you are not blocking your view of the red light in the transmitter.

3. Select the transmitter button you want to train.

4. Press the button on the remote control and the button on the transmitter at the same time. Hold down both buttons.

5. The red light in the transmitter should begin flashing. It will flash slowly at first, then rapidly.

6. When the red light flashes rapidly, release both buttons. The transmitter should have learned the code from the remote control.

7. Test the transmitter button by pushing it. It should operate the garage door.

8. Repeat these steps to train the other two transmitter buttons to operate any other remotely-controlled devices around your home (lighting, automatic gate, security system, etc.).

Canadian Owners:
The remote control you are training from may stop transmitting after two seconds. This is not long enough for the HomeLink transmitter to learn the code. Release and press the button on the remote control every two seconds until the transmitter has learned the code.

If you are programming the transmitter to operate a garage door or gate, it is recommended that you unplug the motor for that device during programming. Repeatedly pressing the remote control button could burn out the motor.

The HomeLink transmitter stores the code in a permanent memory. There should be no need to retrain the transmitter if your car's battery goes dead or is disconnected.

CONTINUED

HomeLink Universal Transmitter

Retraining a Button

To train an already programmed transmitter button to operate a new device:

1. Select the transmitter button you want to train.
2. Press and hold the transmitter button until the red light begins to flash slowly (approximately 20 seconds).
3. While continuing to hold the transmitter button, place the remote control for the device near the HomeLink transmitter.
4. Press and hold the button on the remove control. Hold both buttons until the red light begins to flash rapidly.
5. Release both buttons. The transmitter, should now be trained to operate the device.

Training With a Rolling Code System

For security purposes, newer garage door opening systems use a "rolling" or variable code. If you know that your garage door opener has a rolling code, or you have been unable to train the transmitter after several attempts, use the following procedure. You will need someone to help you.

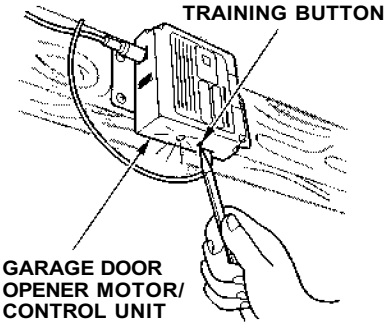

1. Make sure you have properly completed the "Training the Transmitter" procedure.
2. Find the "Training" button on your garage door opener motor/control unit. The location will vary, depending on the manufacturer. The manufacturer's documentation may help.